



# PM100W CONTROL UNIT

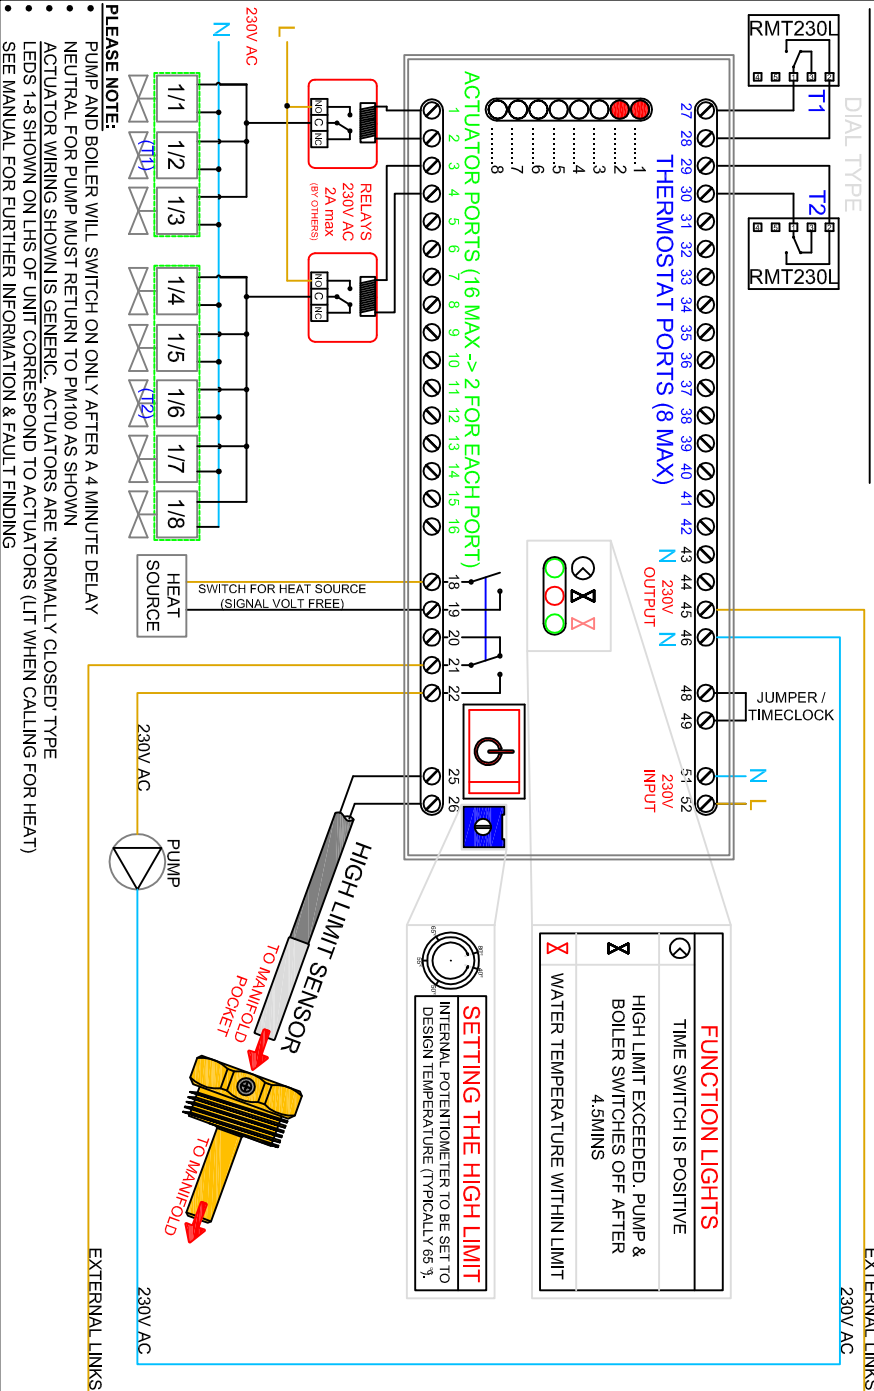

## INSTALLING FLOOR PROBES (RFS)

RET230LSA THERMOSTAT:

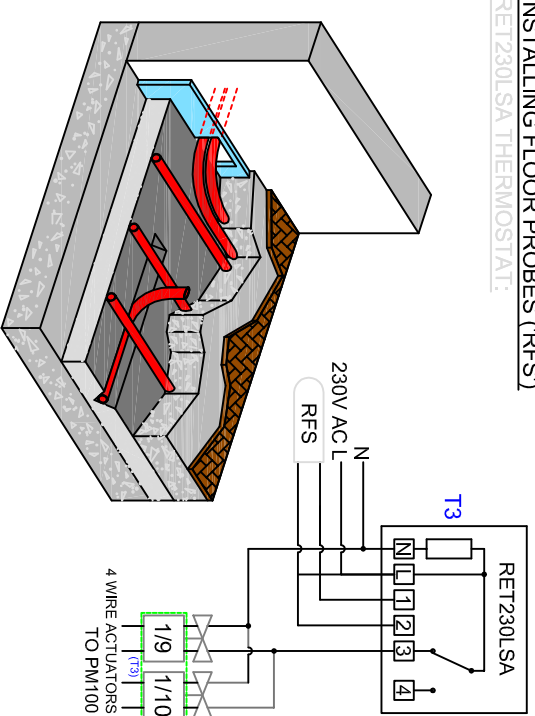

- FLOOR SENSOR TO BE HOUSED WITHIN CONDUIT (SECTION OF HEATING PIPE CAN BE USED). ENSURE END IS SEALED PRIOR TO POURING OF SCREED
- FLOOR SENSOR TO BE POSITIONED AS CLOSE TO CENTRE OF ROOM AND SCREED SURFACE AS POSSIBLE. OTHER END OF CONDUIT MUST BE EASY TO ACCESS FOR ELECTRICAL INSTALLATION
- NOTE: TS2 AIR SENSOR WIRING IS THE SAME AS TS3
- REMOTE FLOOR SENSOR. IT IS TO BE INSTALLED 1.5M FROM FLOOR AND NOT IN DIRECT SUNLIGHT
- ISOLATION TO THERMOSTAT IS RECOMMENDED